


## Way of measuring and installation for HST doors with the thermal doorsill and with outerframe widening.

Attention!

Vertical dimension of HST door is different for the internal and external flooring dimension. In addition, the final level of the floor inside is different from the outside floor level.

### PVC System

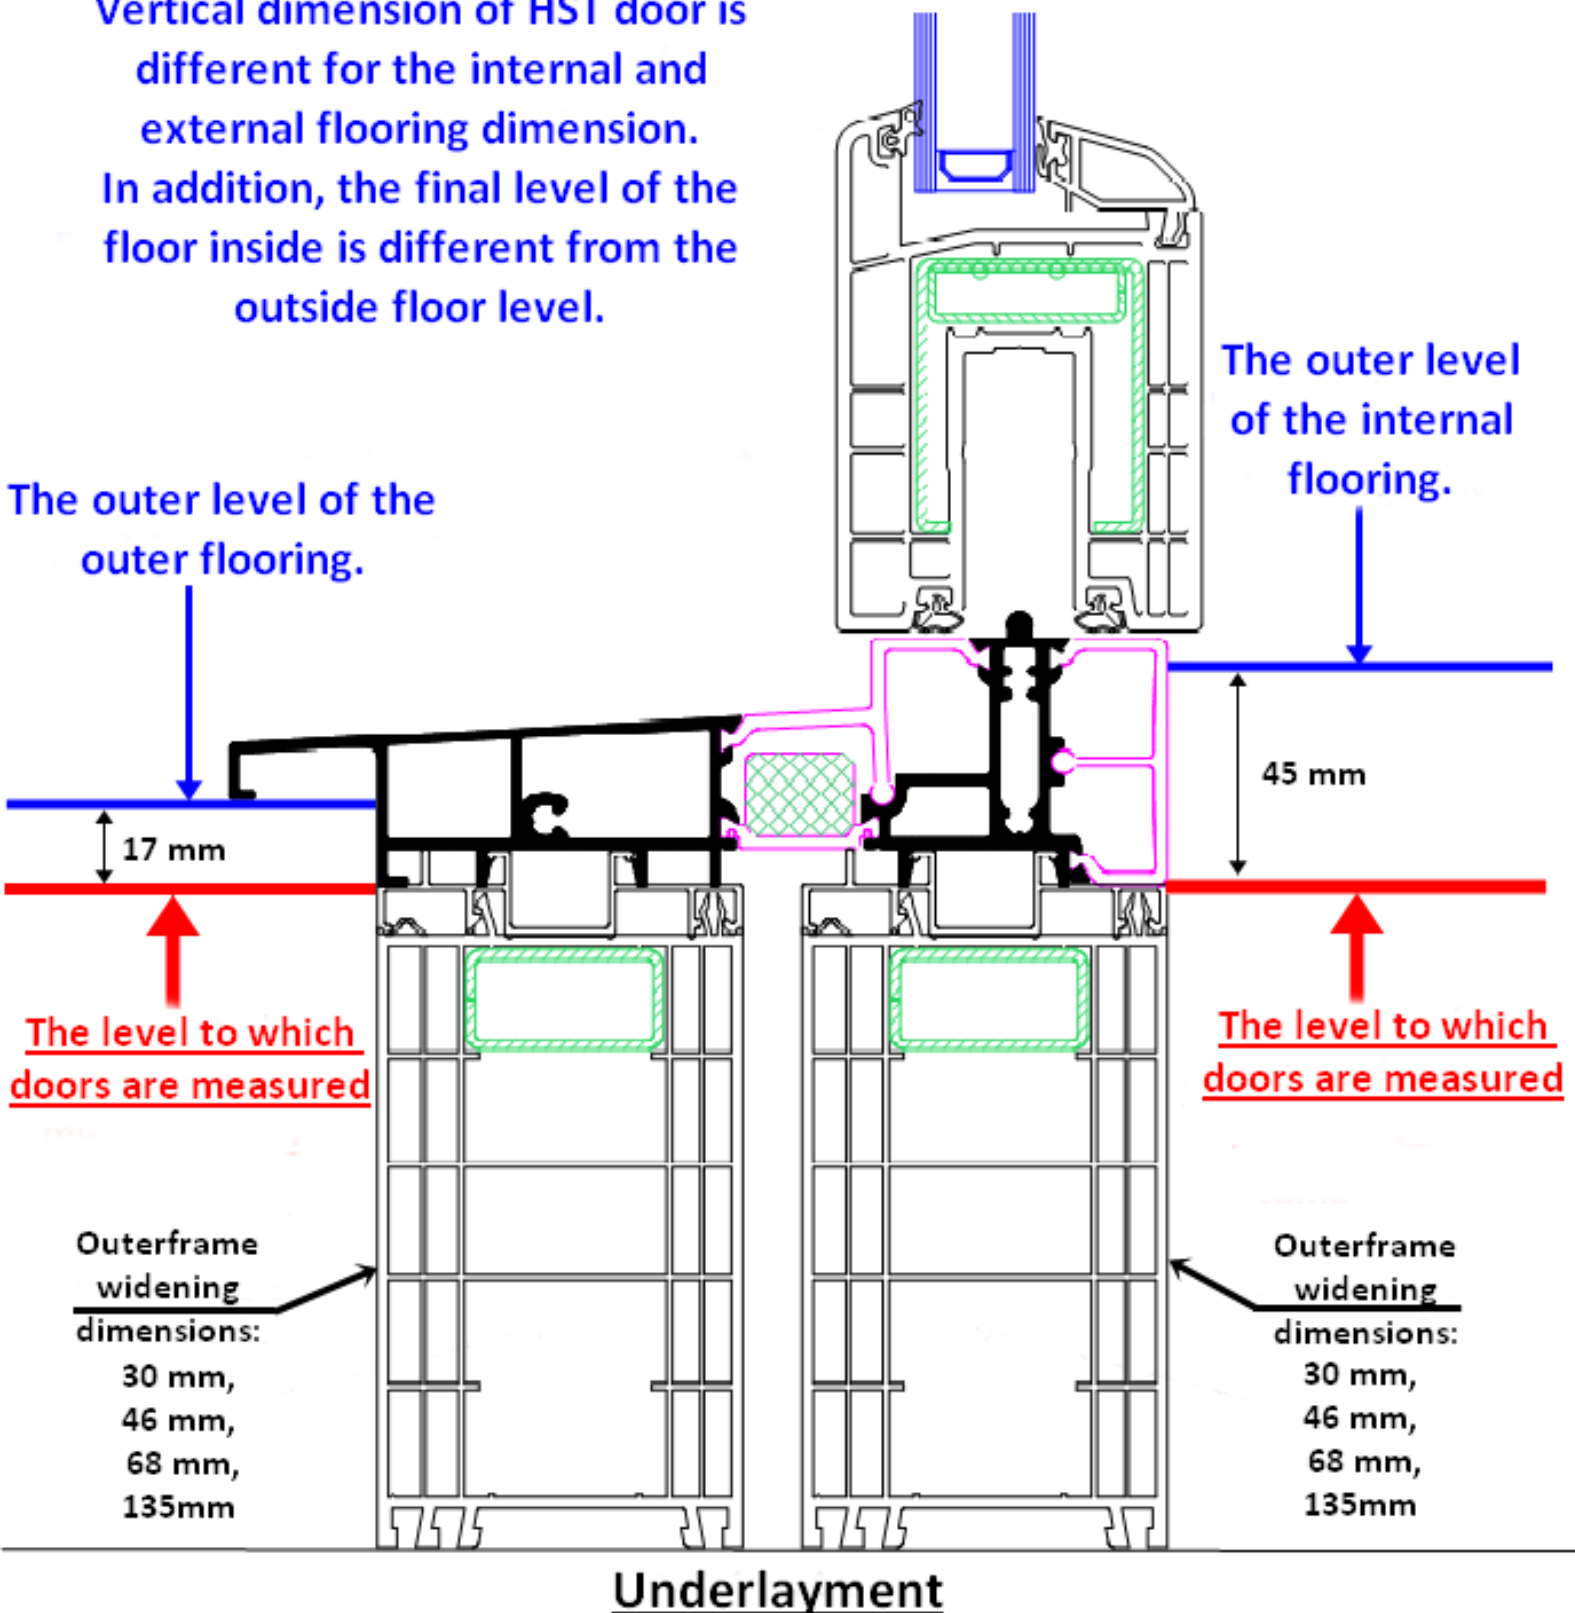


# Way of measuring and installation for HST doors with the thermal doorsill.

Attention!

Vertical dimension of HST door is different for the internal and external flooring dimension. In addition, the final level of the floor inside is different from the outside floor level.

## PVC System

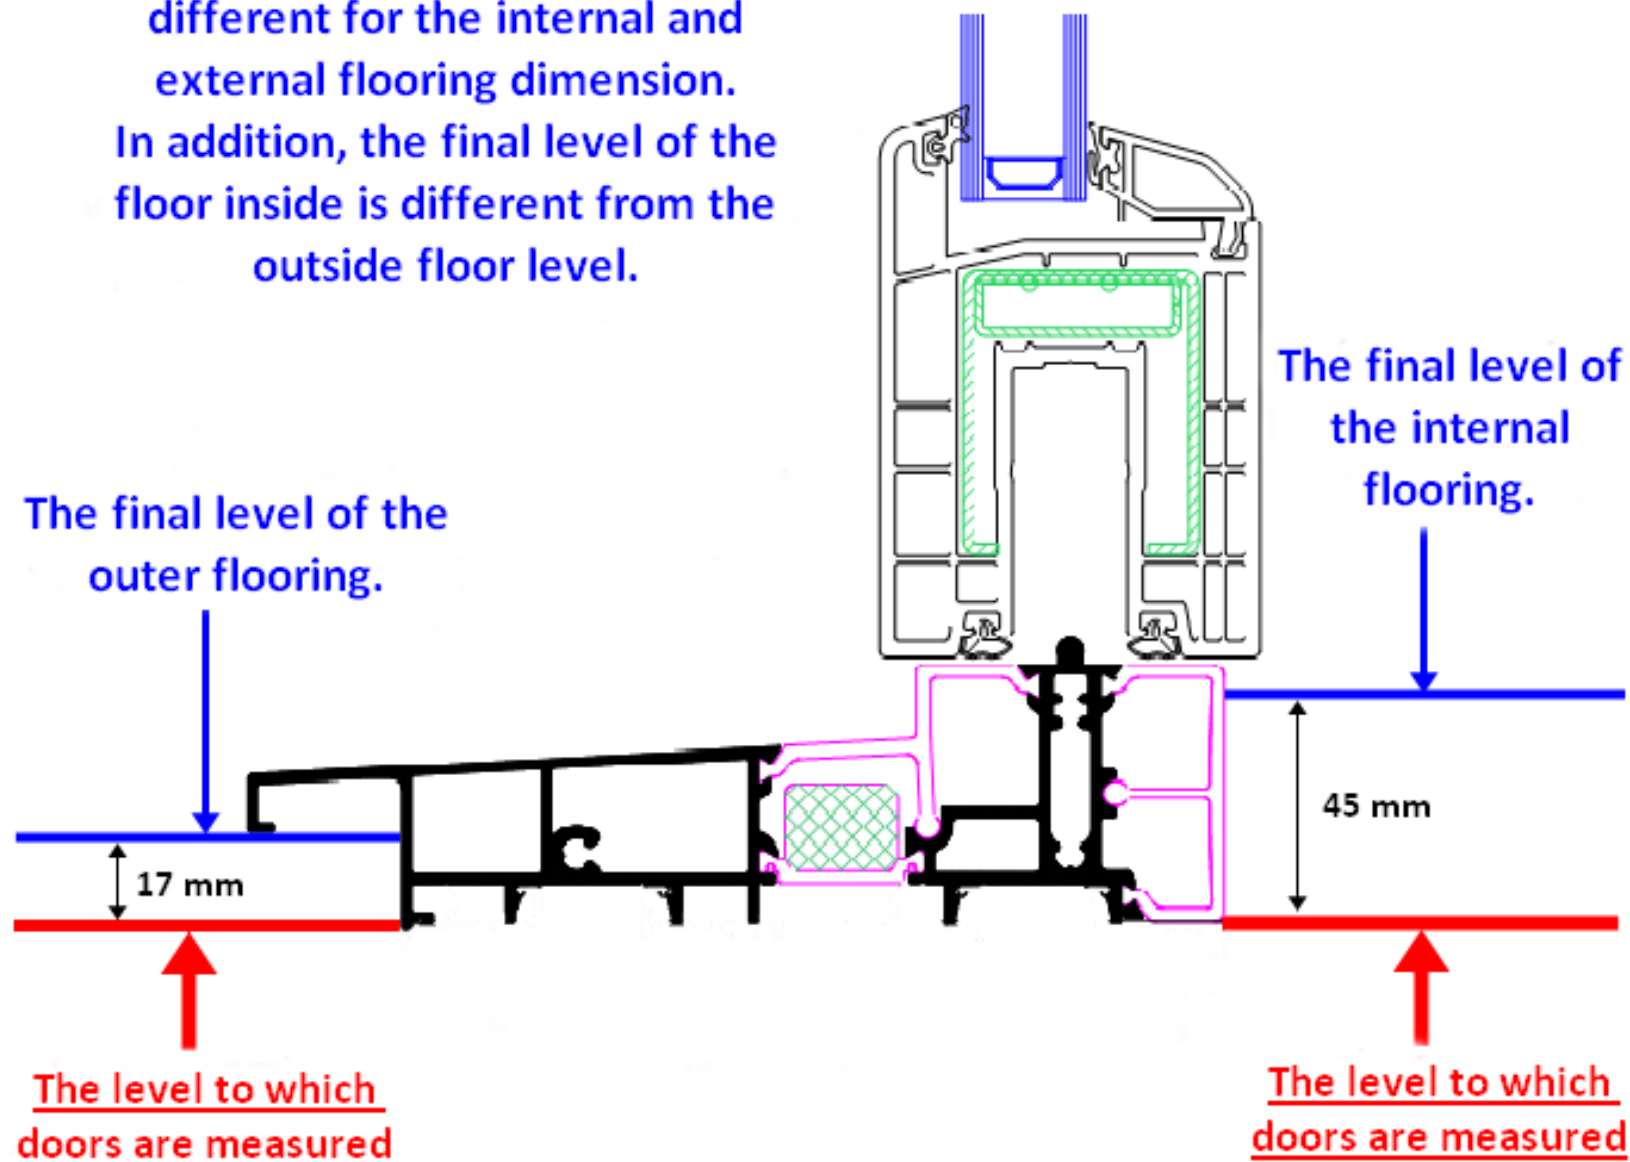


## Way of measuring and installation for HST doors with the thermal doorsill and with outerframe widening

Attention!

Vertical dimension of HST door is different for the internal and external flooring dimension. In addition, the final level of the floor inside is different from the outside floor level.

### Wood System

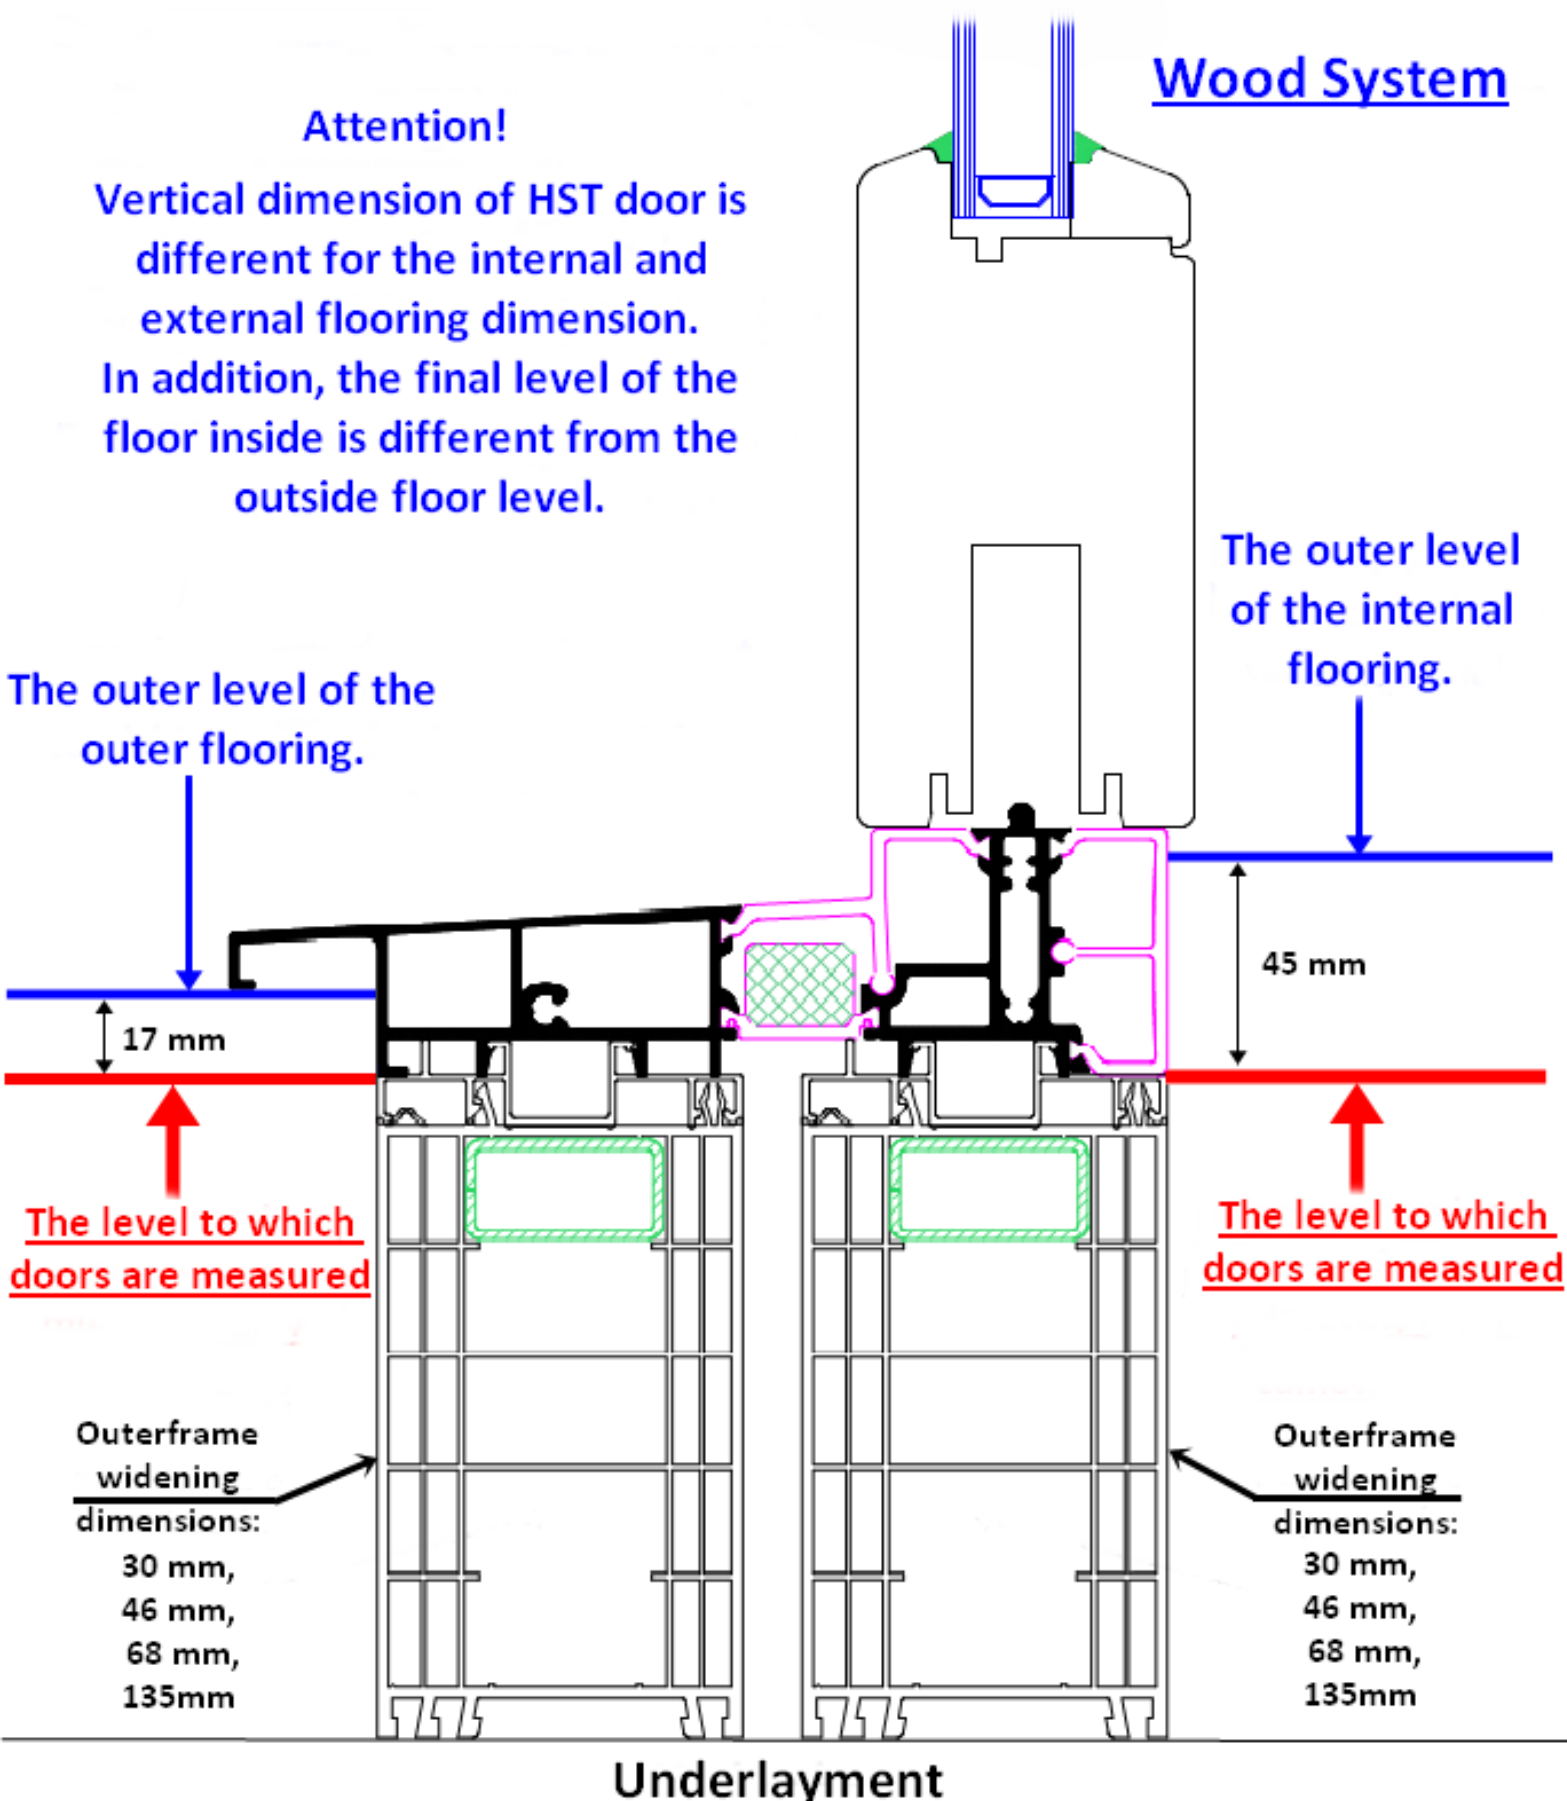

# Way of measuring and installation for HST doors with the thermal doorsill.

Attention!

Vertical dimension of HST door is different for the internal and external flooring dimension. In addition, the final level of the floor inside is different from the outside floor level.

## Wood System

